


AMT Wi5II Series Quick Setup and Technical Bulletin

1. Before using your new wireless system on a performance, charge the transmitter a minimum of 1-2 times to increase the strength of the battery. Doing this procedure will decrease charge time and increase performance time.
 - a. Drain battery by leaving the transmitter on until it shuts off.
 - b. Plug transmitter into charger and charge until full.
 - c. Complete steps a & b 1-2 times.

WARNING: DO NOT ALLOW the transmitter to overcharge. Disconnect the transmitter when it says "FULL".

** The Charge is not complete until the word "FULL" is displayed on the LCD Screen.
***Transmitter is not charging until the 'bars' are flashing, be sure a good connection is made between the transmitter jack and charger.

2. Connect Transmitter to AMT Microphone via locking connector. Connect / snap mounting clip onto microphone.
3. Quick setting channel on transmitter:
 - a. Turn transmitter OFF
 - b. Turn receiver ON.
 - c. Choose Left or Right Side receiver by pressing the middle button once to enter channel mode, then increase or decrease the channel number to choose a channel. (A or B side indicator will appear once transmitter and receiver has been sync'd) (The ZRIII is a dual receiver, which can receive two channels/transmitters at the same time. Signal bars for each side are visible, once a transmitter has been sync'd.)
 - i. Push the middle button ONE time / ONE Click to activate channel change mode. Channel and frequency will flash.
 - ii. With channel indicator flashing, choose the channel by increasing or decreasing the channel number with the top or bottom buttons. Release button, channel is now set on the receiver.
 - d. Once channel number is chosen, push the middle button again and hold it until the antenna icon flashes.
 - e. While the antenna icon is flashing, hold the transmitter within 6 inches of the receiver's IR window and power the transmitter ON. The A/B indicator should now show that a transmitter is sync'd to either side A or B.
4. Power ON / OFF mode. To enter power on/ off model, press the middle function button 5 times to enter mode. Toggle the on/off function with the increase or decrease buttons. The power on/off mode is a useful tool incase the receiver happens to get unplugged during a performance. With the function on, your receiver will power on as soon as the power is re-connected without having to turn the receiver on manually.

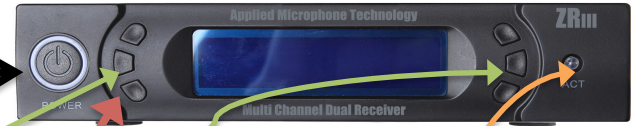

Frequency
Indicator

Channel Number

*** Please be careful when plugging the transmitter charger plug into the charger socket as using excessive force resulting in damage may null and void your warranty.**

For More information:

Applied Microphone Technology

www.appliedmicrophone.com

Ph: 908-665-2727

Tech support: 973-222-1865